

**TABLE OF CONTENTS:**

---

SECTION.....PAGE



# TRANSPORT AND STORAGE

---

 CAUTION



# PUMP INSTALLATION

---

## INSTALLATION

### Installation Configuration

1.



# PUMP OPERATION

---

Priming and Filling

## SHAFT SEALING SETTINGS AND ADJUSTMENTS



# PUMP MAINTENANCE AND SERVICE

---

## MAINTENANCE AND SERVICE

Schedule

Table 2

GUIDE FOR PREVENTIVE MAINTENANCE

Items	Action required	Frequency

# PUMP MAINTENANCE AND SERVICE

---

Table 3

## QUICK REFERENCE FOR TOOLS AND FIXTURES

Item no.	Motor frame	Pumps	Wrench size and type (in inches)










PENTAIR AURORA\* MODEL 382B CC

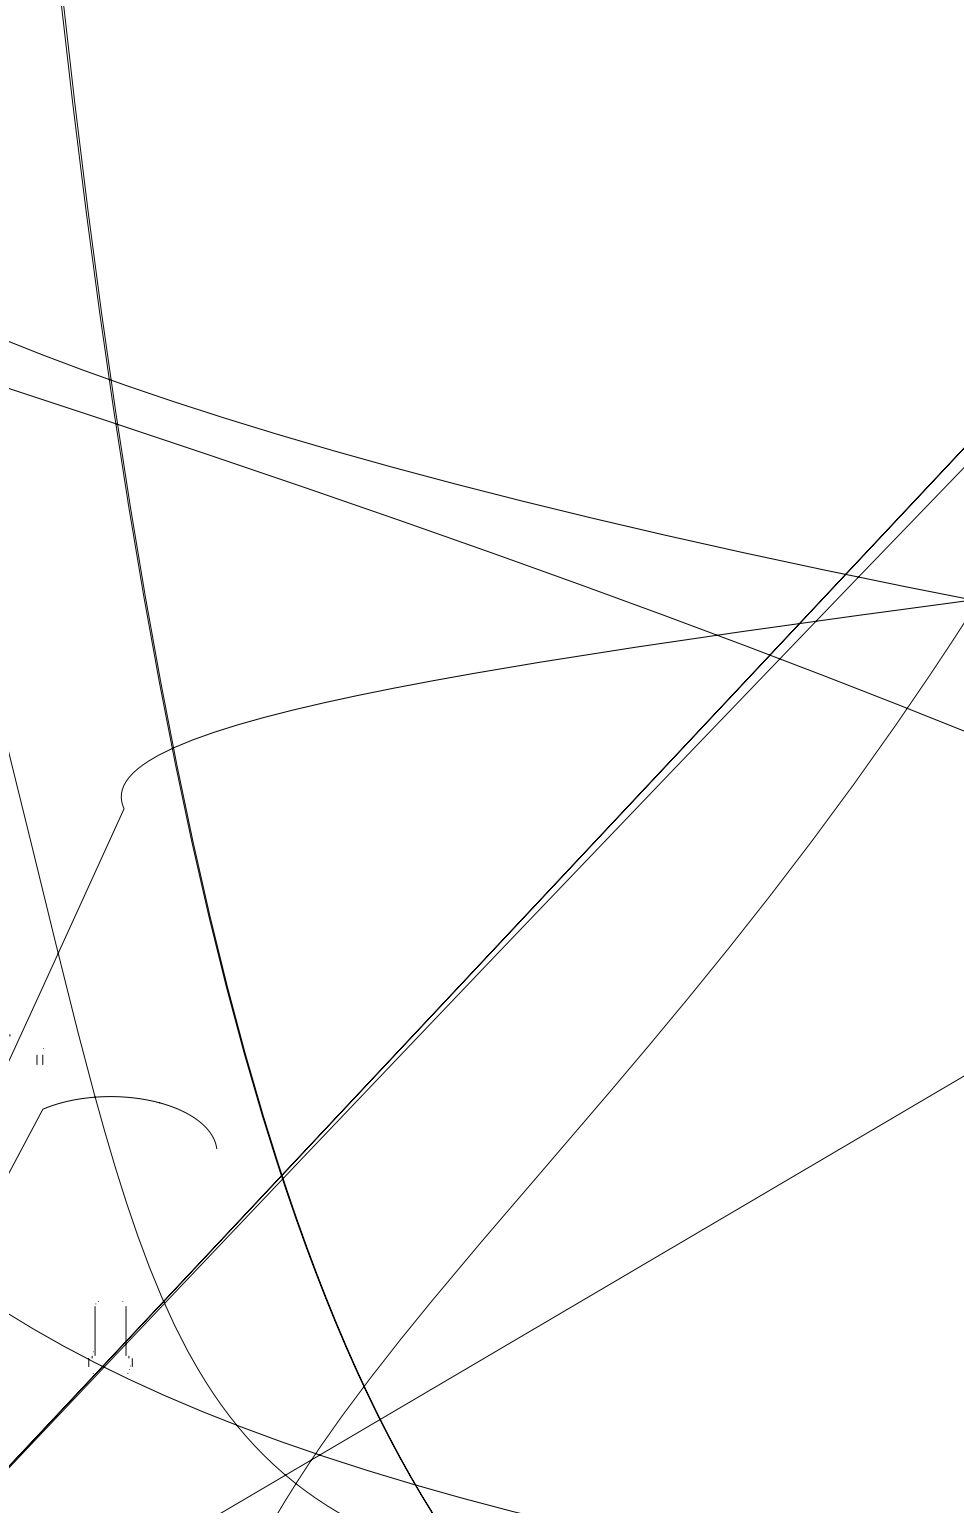









800 Airport Road | North Aurora, Illinois 60542 | Ph: 630.859.7000 | [pentair.com](http://pentair.com)

Third party registered and unregistered trademarks and logos are the property of their respective owners. Because we are continuously improving our products and services, Pentair reserves

AU1064 (09/27/19) ©2019 Pentair. All Rights Reserved.