ENGLISH: PAGES 2-16

NOTE! To the installer: Please make sure you

E OF CONTENTS	STANDARD TERMS AT	ND. CONDITIO		
	PUMP AND DRIVER INSTALLATION General	••••••••••••••••		
		Foundatio Alignment		
Coupling Alignment Grouting	, na ka ka ka ka kata kata ka	*:sat ********		
Pinina	· · · · · · · · · · · · · · · · · · ·			
INITIAL START-UP AND OPFRATING INSTRUCTIONS				
	NCE	•••••• <u>•</u>		
Parkinn Bonlacoment	TERRET CONTRACTOR C	**************************************		
 Second and a second second second by a second se Second second sec				
BDERING PARTS	an a	i i sa ka sa		
BEXH	RAINCARA BERN			
. 11 Sectional — Foo	ure 5600 with impeller wearing rings and the first second			

CALIFORNIA PROPOSITION 65 WARNING: WARNING:

This product and related accessories contain chemicals known to the State of California to cause cancer,



	The side of the second s
있는 것은 것은 것은 것은 것을 알고 있는 것을 것을 것을 하는 것을 하는 것을 가지 않는다. 이 것은 이것은 가지 않는 것은 것을 하는 것은 것은 것을 수요. 	and the second second second statement of the second second second second second second second second second s
TINE A CONTRACT OF	
	ALL BRANCHER FOR THE TAX AND
ニュール マイン アイ・シューマー 「マリーマン・マン・マン・マン・マン・マン・アン・アン・アンド ひきがい ひょうしょう ひょう ゆう あんがうか	1. 12 · 12 · 12 · 12 · 12 · 12 · 12 · 12
	。 1995年1月19月1日(1995年1月19月1日)、1995年1月1日(1995年1月1日)(1995年1日)
이 하는 것이 하는 것이 가장 같아요. 사람은 가장 수사는 가장 있는 것 같아요. 2000년 1000년	
法法法院教师 建铁合物的 化二丁二嗪 化过去法 得到了这一个人,这种经济中国的新闻的市场的东西市场的特别的东西的大都同样的	한 사이의 사람이 있는 것 같은 것 같
지않는 것에서 지하는 회사가 지하는 것이 가지 않았는 것 것이 있는 것 것이 가지 않는 것이 것이 같이 같이 같이 같이 같이 하는 것이 않았다. 가지 않는 것이 같이 같이 같이 같이 같이 같이 많이 나 나 나 나 나 나 나 나 나 나 나 나 나 나 나 나 나 나	見見 かががなる とうとうかい しきがく リアージャイト・オート デー・クロート コート・コート しょうしゃ しょうしゃしゅう しゅうしかがく あかり

- 7. If excessive vibration or noise occurs during start-up, shut the pump down and consult your nearest Fairbanks Nijhuis™ representative. Only Fairbanks Nijhuis qualified representatives should be engaged to service this equipment.
- 8. Keep the stuffing box adjusted so there is sufficient leakage to lubricate the packing and assure a cool stuffing box. (See maintenance instructions)
- 9. If the pumps are stored for a long period of time prior to installation and operation, refer to Fairbanks Nijhuis "Storage of Pumps Notice: Form KC1309, for applicable instructions.

Fairbanks Nijhuis[™] pumps are equipped with high grade antifriction bearings, which are lubricated at the factory for approximately six months average service. Periodic inspections should be made by loosening the bearing covers enough to permit visual examination of the bearings. The cover and bearing and bearing cavity should be approximately half full of lubricant.

Regreasable bearings will require periodic lubrication and this can be accomplished by using the zerk or lubrication fitting at each bearing. Lubricate the bearings at regular intervals using high quality grease. For 5800F Series: The initial bearing lubrication at Aurora is Chevron SRI Grease NLGI 2 (polyurea thickener) (Pentair Part Number 384-0002-639). For 5800 Series: the initial bearing lubrication at Fairbanks Nijhuis is Lithium Base NLGI 2 grease from a reputable manufacturer. Before lubricating the bearings, thoroughly flushing the old grease with the new grease is required. We recommend Chevron SRI Grease NLGI 2 (polyurea thickener) for follow-up relubrication after the flushing. Most major brands of Grade No. 2 ball bearing grease are satisfactory for pump operation in both wet and dry applications.

Be aware that mixing of different brands or blends of grease should be avoided due to possible incompatibilities that could damage the bearings. A thorough flushing of the old grease with the new grease is required to minimize this potential incompatibility. Avoid using the following: (1) grease of vegetable or animal base that can develop acids or (2) grease containing rosin, graphite, talc or other impurities. Under no circumstances should grease be reused.


Over lubrication should be avoided as it may result in overheating and possible bearing failure. Under normal application, adequate lubrication is assured if the amount of grease is maintained at 1/3 to 1/2 the capacity of the bearing and adjacent space surrounding the bearing.


In dry locations, each bearing will need lubrication at least every 4,000 hours of running time or every 6 to 12 months, whichever is more frequent. In wet locations the bearings will need lubrication at least after every 2,000 hours of running time or every 4 to 6 months, whichever is more frequent. A unit is considered to be installed in a wet location if the pump and motor are exposed to dripping water, to the weather, or to heavy condensation such as found in unheated and poorly ventilated underground locations.


The stuffing boxes on Fairbanks Nijhuis pumps are packed at the factory with a good grade of packing. However, all packing is subject to wear and should be given regular inspections and, if necessary, adjusted or replaced.

r jupagenstenstranderstalle

C. Clean the packing box and shaft sleeve.

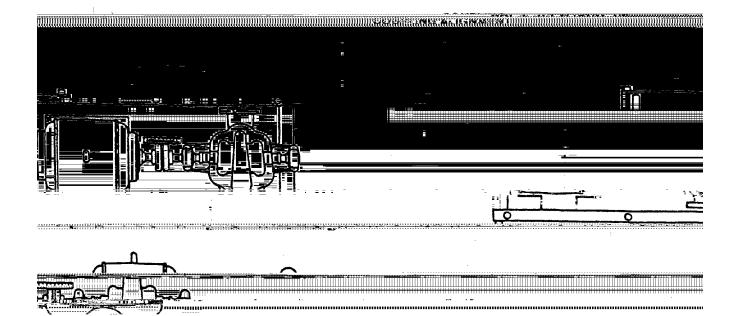

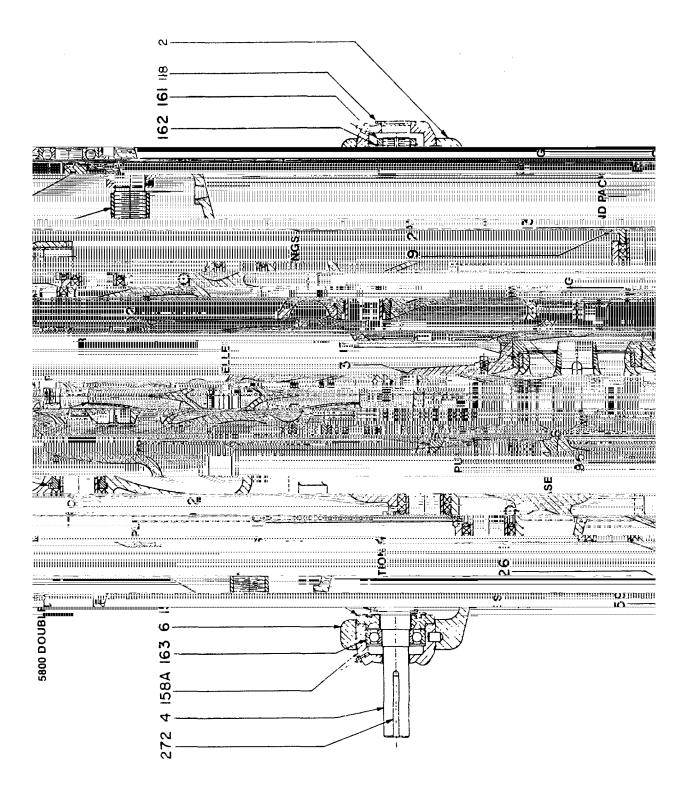

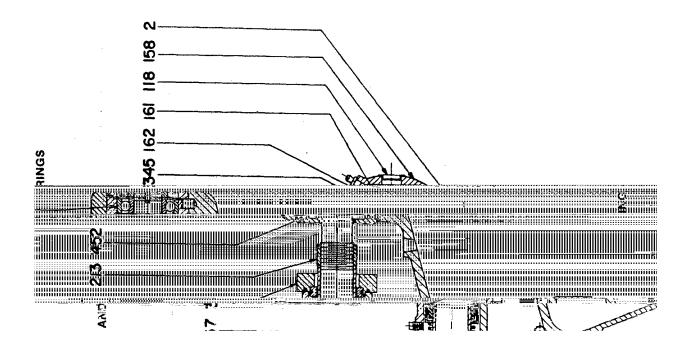

REF. NO.	DESCRIPTION	
1	Impeller	
2		

14	Sleeve, Shaf
16	Wear Ring, (
17	Wear Ring, I
19	Gland
102	Key, Impelle

TROUBLE SHOOTING GUID	E		
1. Check for proper venting of casting.	• • • • • •	NO 1. Pt	
tane? Speed.		tor tor and remove any obstruction in suc	
		ermiennstettaner ontstansataris near Correct if required 21.5ee - Frankright 21.5ee - Frankright	
	sive power consumption.		
	er half casing and clean impeller as requ	the st	
he lines and receives full voltage.	INSUFFICIENT PRES 1. Speed too low.		
	2::500	1. Determine wheth Correct if require axcessive power consering non arthiuming	
€.Exœsive	Wearing Ping.	tas-ustimetin Meintenance-section	
	POWER CONSUMPTION	ht. 1. Loosen gland	
	3. Bearings defec		
4. Couplin	ng misaligned. 1. Corr	rect as outlined in Alignment section.	
EXCESSIVE STUFFING BOX LEAKAGE			